

# MANUAL

## VERIFONE VX680



## INDEX:

|                                     |           |
|-------------------------------------|-----------|
| <b>1. BEFORE USE</b>                | <b>4</b>  |
| 1.1 Important                       | 4         |
| 1.2 PA-DSS –Standard                | 5         |
| 1.3 Terminal structure              | 6         |
| 1.4 Technical data                  | 7         |
| 1.5 Connecting the cables           | 7         |
| 1.6 Battery                         | 8         |
| 1.7 SIM-card                        | 9         |
| 1.8 Touchscreen                     | 9         |
| 1.9 Stylus                          | 9         |
| 1.10 Using the menus                | 10        |
| 1.11 Letters and special characters | 10        |
| 1.12 Terminal start-up and shutdown | 10        |
| 1.13 Switching the paper            | 11        |
| 1.14 Testing the connection         | 11        |
| <b>2. SETTINGS</b>                  | <b>12</b> |
| 2.1 Terminal settings               | 12        |
| 2.2 Parameter printing              | 12        |
| 2.3 Batch time                      | 12        |
| 2.4 Cashier number                  | 12        |
| 2.5 Time and date settings          | 13        |
| 2.6 Fixed IP-address                | 13        |
| 2.7 Power options                   | 13        |
| 2.8 Contrast                        | 13        |
| 2.9 Sounds                          | 13        |
| 2.10 GPRS APN                       | 14        |
| 2.11 WIFI settings                  | 14        |
| 2.12 Audit log IP                   | 14        |
| <b>3. DOWNLOADS</b>                 | <b>15</b> |
| 3.1 Downloading applications        | 15        |
| 3.2 Parameter downloading           | 15        |
| 3.3 Certificate downloading         | 15        |
| <b>4. DAILY USE</b>                 | <b>16</b> |
| 4.1 Transactions                    | 16        |



|                                                       |           |
|-------------------------------------------------------|-----------|
| 4.1.1 Chip card transactions .....                    | 16        |
| 4.1.2 Swipe card transactions .....                   | 16        |
| 4.1.3 Contactless card transactions .....             | 17        |
| 4.1.4 Reversal .....                                  | 17        |
| 4.1.5 External void .....                             | 17        |
| 4.1.6 Manual entry .....                              | 18        |
| 4.1.7 Receipt copy.....                               | 18        |
| 4.1.8 Refund.....                                     | 18        |
| 4.2 ONLINE TRANSACTIONS.....                          | 19        |
| 4.2.1 General information on online transactions..... | 19        |
| 4.2.2 Online batch.....                               | 19        |
| 4.2.3 Point reporting.....                            | 19        |
| 4.3 Reports and bank connection .....                 | 20        |
| 4.3.1 Print batch .....                               | 20        |
| 4.3.2 Monthly report .....                            | 20        |
| 4.3.3 Send Batch.....                                 | 21        |
| 4.3.4 Blacklist.....                                  | 21        |
| 4.3.5 Report explanations .....                       | 22        |
| <b>5. SPECIAL FUNCTIONS.....</b>                      | <b>25</b> |
| 5.1 Cash receipt .....                                | 25        |
| 5.2 Cash back.....                                    | 25        |
| 5.3 Cash withdraw .....                               | 25        |
| 5.4 Extra amount .....                                | 26        |
| 5.5 VAT .....                                         | 26        |
| 5.6 Mandatory authorization .....                     | 27        |
| 5.7 Preauthorization .....                            | 27        |
| 5.8 Invoice .....                                     | 27        |
| 5.9 Multiuser version .....                           | 28        |
| 5.10 Product version .....                            | 28        |
| <b>6. TROUBLE SHOOTING.....</b>                       | <b>31</b> |
| 6.1 Notifications on the screen .....                 | 31        |
| 6.2 Notifications on the receipt.....                 | 32        |
| 6.3 Other exceptions.....                             | 32        |
| 6.4 Service.....                                      | 34        |



## 1. BEFORE USE

### 1.1 Important

**NOTE! If these instructions are not followed and the terminal is damaged it will void the warranty!**

- Protect the power cord and modem. If they are damaged they are not to be used anymore.
- The terminal is not waterproof or dustproof, and is intended for indoor use only.
- The warranty of the terminal will void if it is exposed to water or dust.
- Do not use the terminal next to water or moist areas.
- Do not use below 0°C degrees.
- Never place anything inside the chip slot or connection ports that are not meant there. This might seriously damage the terminal.
- If the terminal is damaged contact Point's maintenance service. Never try to fix the terminal by yourself.
- Use only appropriate paper with the terminal's printer. Poor quality paper can jam the printer and create excessive paper dust.
- Never use thinner, trichloroethylene, or ketone-based solvents- they may cause deterioration of plastic or rubber parts. Do not spray cleaners or other solutions directly onto the keypad.
- Always shut down the terminal before removing the battery.
- Disconnecting the power during a transaction may cause transaction data files not yet stored in terminal memory to be lost.
- The terminals Li-ion –battery is not hazardous waste. Do not dispose the battery with combustible wastes. The battery should be recycled with other hazardous wastes or delivered to the terminal supplier for disposal.



## 1.2 PA-DSS –Standard


The purpose of the PA-DSS –standard is to help software suppliers develop, according to the PCI-DSS requirements, payment solutions which do not save forbidden card information such as the CVV2 or the PIN-code.

Companies must use solutions for card payment processing that are approved according to the PCI-DSS –standard.

For the latest version of the Point PA-DSS Implementation Guide, go to <http://www.point.fi/manuals>



### 1.3 Terminal structure

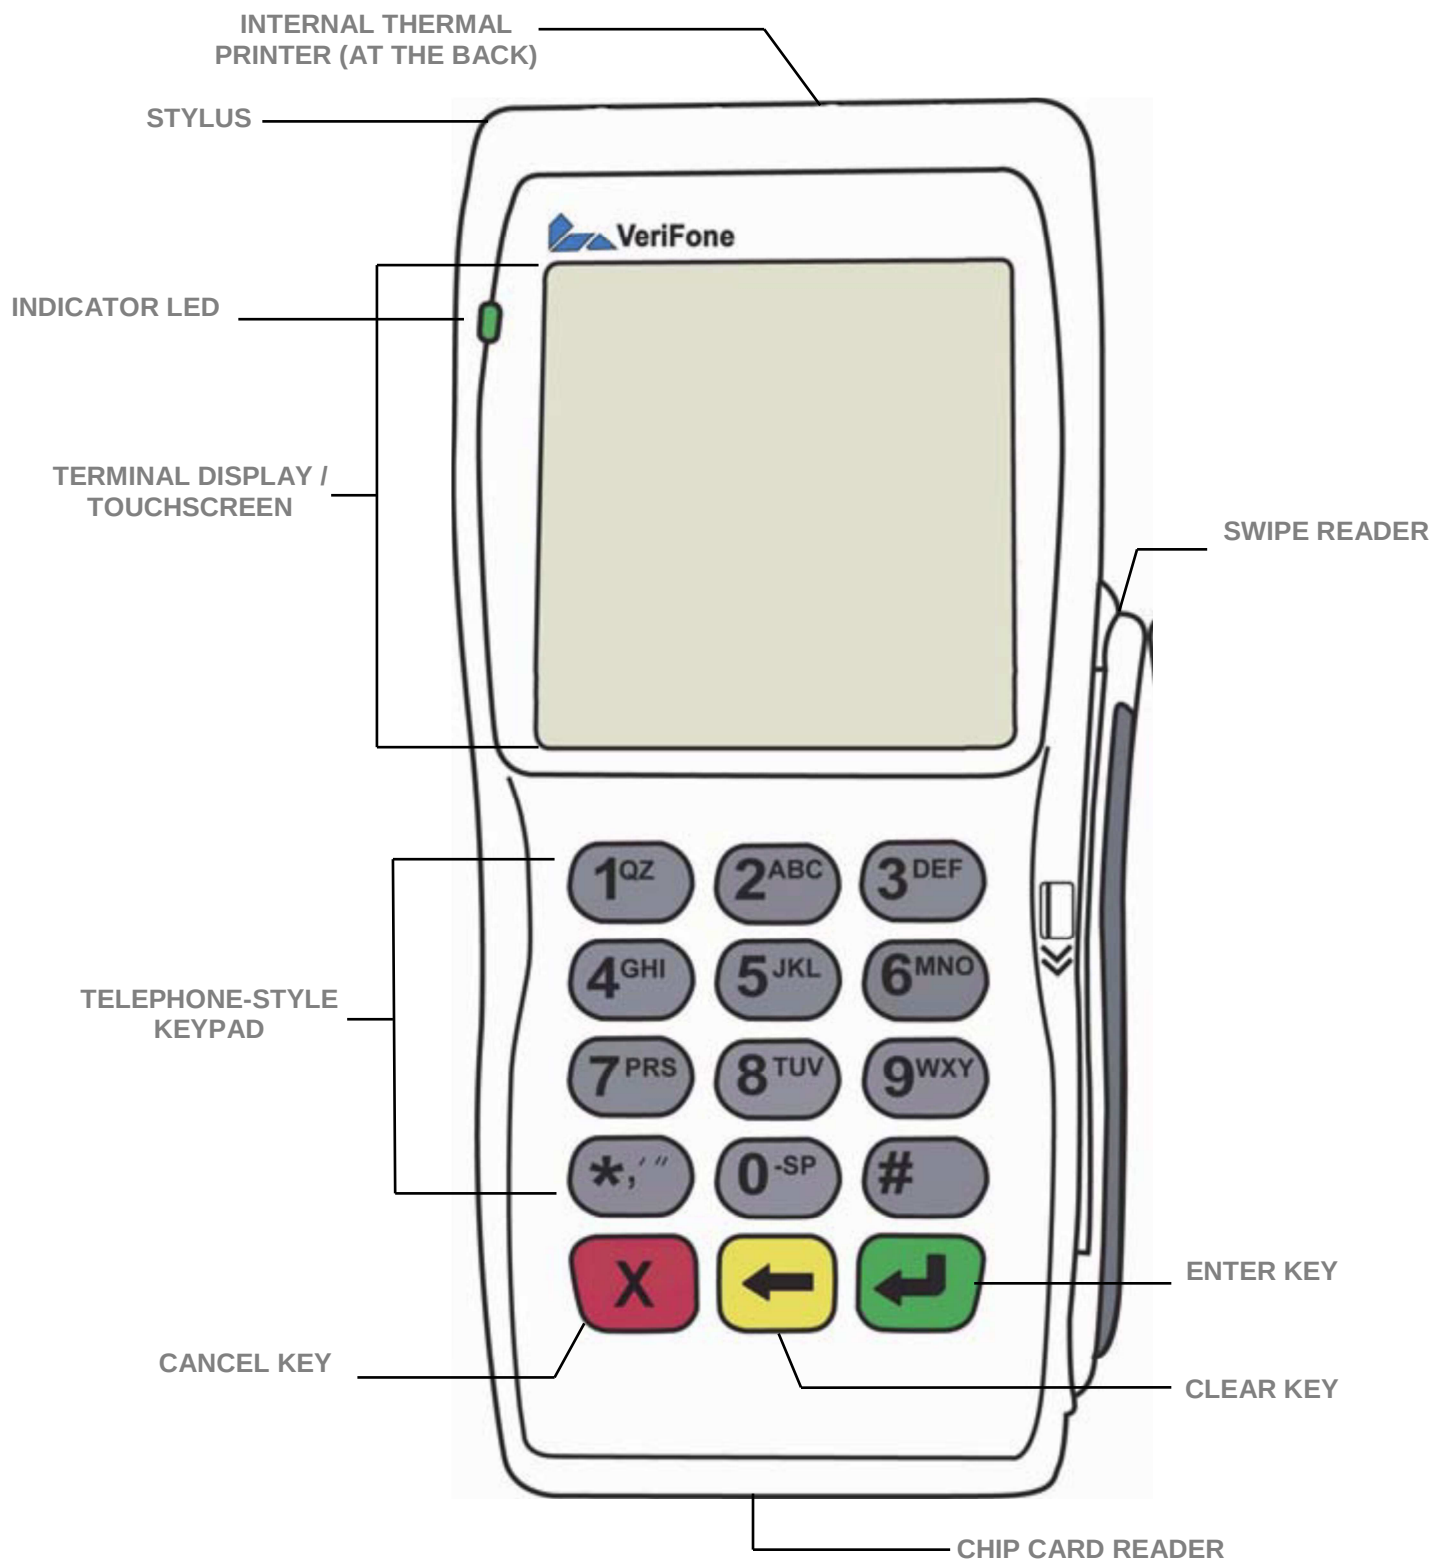

## 1.4 Technical data

|                    |                                                                                                                                                              |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Processor:         | 400 MHz ARM11, 32-bit RISC processor                                                                                                                         |
| Memory:            | 192 MB (128 MB Flash, 64 MB SDRAM) standard, can exceed up to 500 MB. Optional micro SD Flash memory card                                                    |
| Display:           | 240 x 320 pixel color TFT (QVGA)<br>supports up to 26 lines x 26 characters<br>8 soft-function keys and 4 screen-addressable keys via resistive touch screen |
| Swipe card reader: | Triple track (tracks 1, 2, 3), high coercivity, bi-directional                                                                                               |
| Chip card reader:  | ISO 7816, 1.8V, 3V, 5V; synchronous and asynchronous cards<br>EMV Approved                                                                                   |
| SAM-card readers:  | 3 Security Access Modules (SAMs)                                                                                                                             |
| Keypad:            | 3 x 4 numeric keypad, plus screen addressable keys can be simulated on resistive touch screen                                                                |
| Peripheral Ports:  | Single multi-port connector, which supports RS-232, USB Host, USB Slave, and Integrated Charging                                                             |
| Connection:        | GPRS or WLAN                                                                                                                                                 |
| Printer:           | Integrated thermal with graphics capabilities,<br>18 lines per second, 22, 32, or 42 columns.<br>Paper roll width 40mm, diameter 40 mm.                      |
| Security:          | 3DES, Master/session and DUKPT key management; PED approved, SSL, WPA                                                                                        |
| Battery:           | 1800 mA lithium-Ion Smart                                                                                                                                    |
| Physical:          | Length 17.2 cm, max width 8.2 cm, height 6.2 cm, weight 477 g                                                                                                |


## 1.5 Connecting the cables




*Connect the adapter to the main power cord, the power cord to the power supply and the plug to the electrical outlet. The adapter is connected at the bottom of the terminal into the left port.*

## 1.6 Battery

*The battery is attached by placing it on its slot and pressing it downwards.*

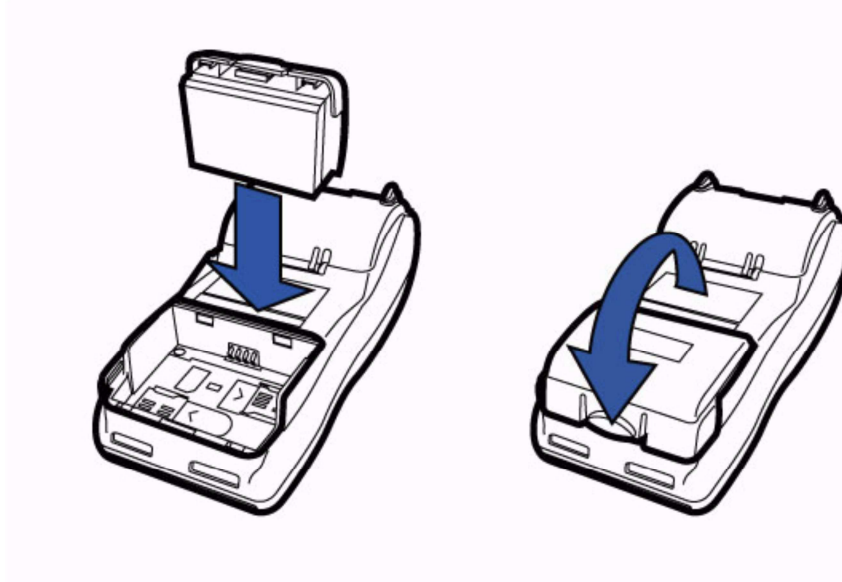

*To remove the battery, press the locking tab and pull the battery from its slot.*

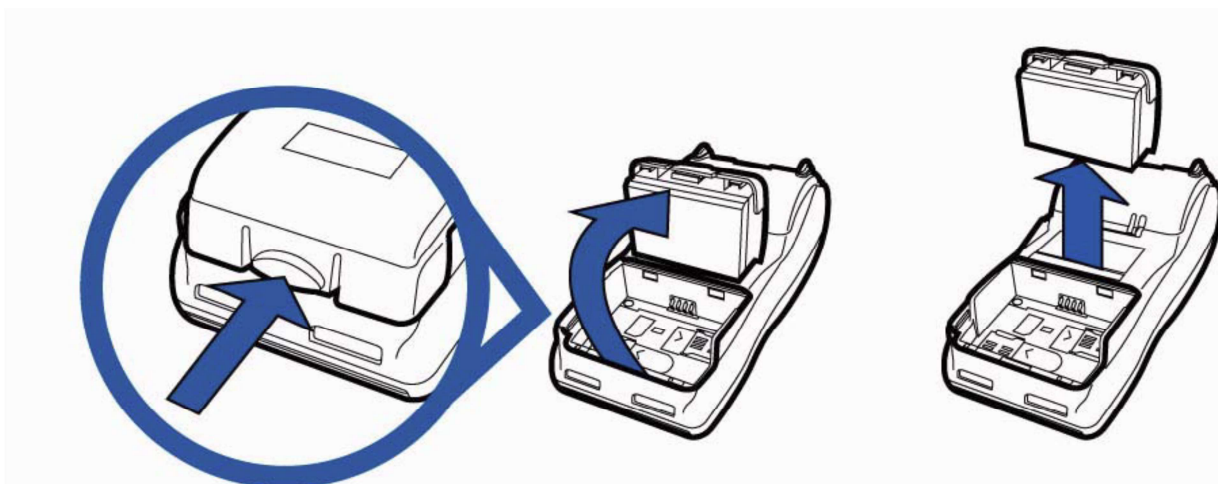


When the power cord is not connected to the terminal, it shows the state of the battery on the top right corner of the screen. The text BAT and the bars on top of it indicate how much is left of the battery. During normal use, the battery should be loaded when its indicator shows 1 bar or less. The terminal starts charging the battery when it is connected to the power cord. When the battery is charging, the LED-indicator blinks as an orange light. When the battery is fully charged the LED-light turns green. When the battery is almost empty the light turns red. The terminal can be connected to the power cord at all times; this does not affect the battery. It is recommended to keep the terminal connected to the power cord during night time. This will charge the battery so that it is fully charged at the start of the next work day, and also ensure the success of possible automatic batch sendings during the night.

## 1.7 SIM-card

Terminals which use GPRS-connection have a SIM-card. Before inserting the SIM-card inside the terminal, disable the PIN-code query.

The SIM-card operator's APN information is inserted to the GPRS APN menu in the terminal. The APN information is set to INTERNET by default, change this if needed.

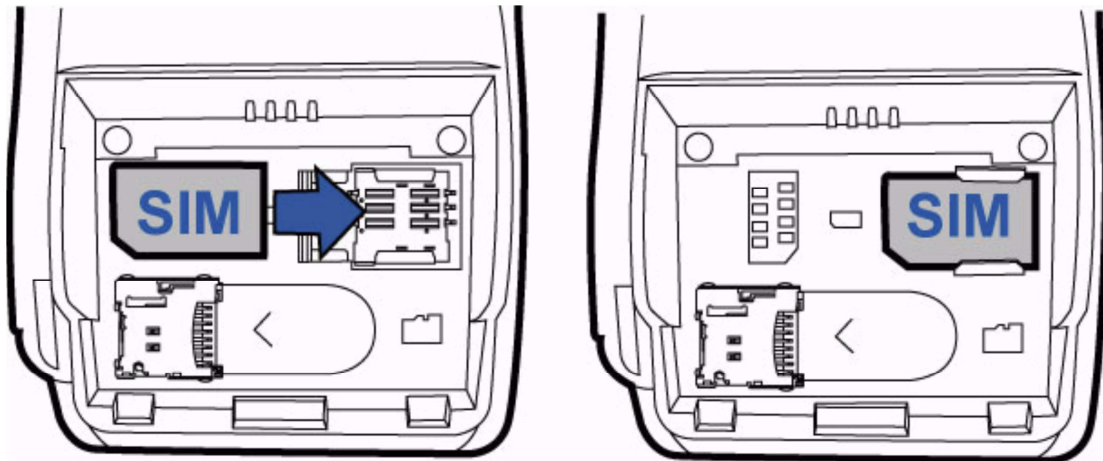



*The SIM-card is placed beneath the battery so that the chip is facing down and the folded corner points downwards.*

## 1.8 Touchscreen

The terminal has a touchscreen, which allows selecting menus directly from the screen. Enter- and cancel-functions can be selected directly from the screen or by pressing the particular key.

## 1.9 Stylus

The terminal comes with a stylus, which eases the selection of on screen menus. The stylus is located inside the left top corner of the terminal.

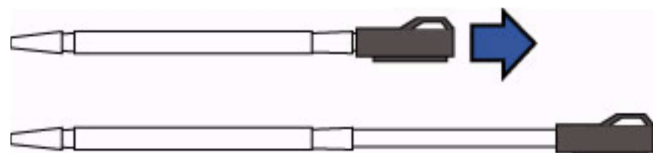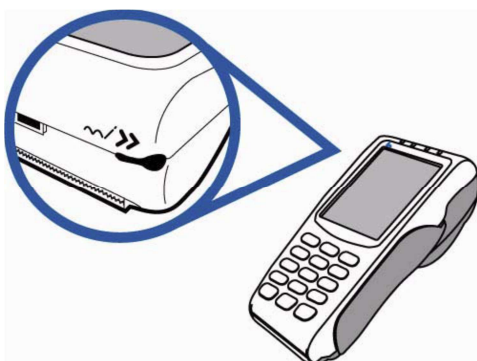

## 1.10 Using the menus

To see the terminal's various settings and functions, press the desired menu icon from the screen. To scroll inside the menu's press the arrow keys from the screen, or numbers 1 and 3 from the keypad. To select a particular function or setting, press its text field from the screen. A function is selected by pressing the enter key from the screen or from the keypad. To view the previous display, press the cancel key from the screen or from the keypad. To get to the main screen, press the cancel key several times. When selecting Reports or Settings the terminal asks to press enter.

### 1.1.1 Letters and special characters

To insert letters and special characters press the number with the desired character until the appropriate character appears. To switch capital letters into lower case letters, press the "A->a" icon from the screen.

1= Q Z .  
2= A B C  
3= D E F  
4= G H I  
5= J K L  
6= M N O  
7= P R S  
8= T U V  
9= W X Y  
0= - space +  
\*= , ' "  
#= ! : ; @ = & / \ % \$ \_

### 1.1.2 Terminal start-up and shutdown


The terminal is switched on by pressing the Enter key for a while or by connecting it to the power cord. To shutdown the terminal press the Cancel key until the terminal shuts down.

**NOTE! The terminal will not shutdown if the power cord is connected.**



### 1.13 Switching the paper

- Pull the printer covers eject button upwards, so that it opens.
- Remove the previous paper roll from the printer tray.
- Place the new paper roll so that the paper moves from the bottom of the roll towards the front edge.
- Leave a small amount of paper to extend outside the printer door.
- Close the printer cover.
- The terminal informs "PAPER INSERTED PRESS ANY KEY". Press any key to continue.

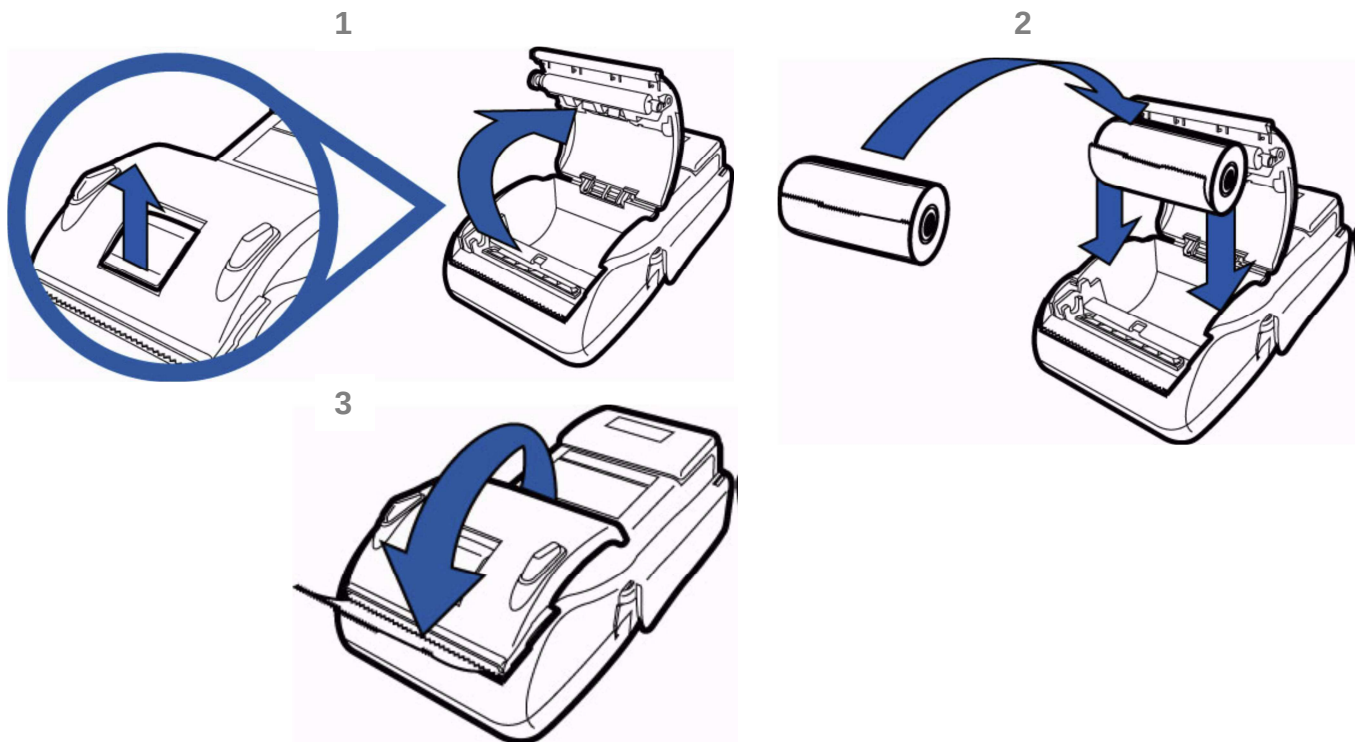

### 1.14 Testing the connection

From the main display, select the Reports menu by pressing its icon. After this, press enter and select SEND BATCH. The screen informs DIALING. If the terminal successfully connects, the text CONNECTED appears on screen. A white bar and the text RECEIVING are displayed on screen. The bar turns gradually black as the batch sending progresses. The terminal downloads the blacklist and other required card information files from the bank.

After this, the terminal is ready for use.

If the blacklist is not downloaded to the terminals memory, you can test the connection by switching on the terminal.

The screen informs BLACKLIST MISSING UPDATE THE BLACKLIST? Press Enter, and the terminal connects to the bank and downloads the blacklist and other required card information files. If the connection is not working, see section 7 TROUBLESHOOTING for further information.

## 2. SETTINGS

### 2.1 Terminal settings

To get to the terminals setting menu, select the Settings icon from the screen and press Enter. Some of the listed settings are explained in later sections. The sections are marked in brackets. From the Settings menu choose EDIT.

|                        |                                      |
|------------------------|--------------------------------------|
| BATCH TIME (2.3)       | Batch sending time                   |
| CASHIER NUMBER (2.4)   | Terminal's cashier number            |
| TCP/IP PARAMETERS      | DHCP / FIXED IP                      |
| LANGUAGE               | Terminal's language (FIN/SWE/ENG)    |
| EXTRA AMOUNT (5.4)     | Extra amount settings                |
| CASH RECEIPT (5.1)     | YES / NO                             |
| POWER OPTIONS (2.7)    | Terminal's power settings            |
| AUTH. MANDATORY (5.6)  | YES/ NO                              |
| TIME SETTINGS (2.5)    | Time and date settings               |
| VAT (5.5)              | YES / NO                             |
| PREAUTHORIZATION (5.7) | YES / NO                             |
| SOUND (2.9)            | ON / OFF                             |
| CONTRAST (2.8)         | Settings for the screen's brightness |
| AUDIT LOG IP (2.12)    |                                      |

### 2.2 Parameter printing

Select the Settings menu and press Enter.

Choose PRINT and PARAMETERS.

The terminal prints out the parameters list, which shows the technical settings of the terminal. This list is good to save.

### 2.3 Batch time

The terminal will send the batch automatically if you have set a sending time to the setting. Sending time can be at any time. We recommend that the time is after the closing time. Even hours are not recommended (e.g. 2100).

If you do not want to use the automatic sending time, set it to be at 9999. The batch must then be sent manually.

To set the sending time, choose BATCH TIME from the EDIT menu. Type on the screen the sending time that you want with four digits (e.g. 0315).

### 2.4 Cashier number

If you have in use more than one terminal, it is important to specify each terminal by their cashier number. The cashier number is printed on every receipt so that it is easy to discover which transaction has been done with which terminal in any problem cases. From the EDIT menu, choose CASHIER NUMBER. Type on the screen the cashier number that you want for the terminal with three digits (e.g. 001).



## 2.5 Time and date settings

Select TIME SETTINGS from the EDIT menu.

Choose ADJUST CLOCK.

Select the information you want to change, type in the new value and press Enter.

## 2.6 Fixed IP-address

If the terminal uses WLAN-connection, fixed IP-addresses must be defined to the terminal. Select TCP/IP PARAMETERS from the EDIT menu and choose FIXED IP.

Activate IP address = the IP-address for the terminal

Default gateway = Default gateway

SUBNET MASK = Subnet mask

DNS 1 / DNS 2 = Terminal does not use DNS addresses

## 2.7 Power options

Select POWER OPTIONS from the EDIT menu.

Shut down timer = Time it takes that the terminal automatically shuts down. The time is indicated in seconds (e.g. 180 = 3 min.) The terminal does not shutdown if it is connected to the power cord. If the sleep timer is enabled the terminal also will not shut down. If you want to disable the shut down timer, type 0 as the value.

Online bat percent = minimum battery reserve that the terminal requires to work. This is indicated in percentage (e.g. 20).

Sleep timer = Time it takes that the terminal's screen saver appears. This is indicated in seconds (e.g. 90 = 1.5 min). The screen saver will not appear, if the terminal is connected to the power cord. If you want to disable the screen saver, type 0 as the value.

## 2.8 Contrast

You can adjust the screen's contrast from the CONTRAST-settings with the minus and plus icons. Select the Menu icon from the screen and choose CONTRAST.

## 2.9 Sounds

To disable the terminal's button sounds, select SOUND from the EDIT menu and choose OFF.



## 2.10 GPRS APN

**NOTE! To change the GPRS APN information you need the terminal's daily password. To get the password go to Point reporting or contact Point's customer service.**

Press the SETTINGS icon and input the daily password.  
Press enter and choose EDIT  
Choose GPRS APN and input your operator's APN information.

## 2.11 WIFI settings

**NOTE! To change the WIFI information you need the terminal's daily password. To get the password go to Point reporting or contact Point's customer service.**

Press the SETTINGS icon and input the daily password.  
Press enter and choose EDIT  
Choose WLAN PARAMS

SSID = Network's name  
WEP KEY = Network's password  
WEP MODE = WPA or WPA2 **NOTE! The terminal doesn't support other encryptions!**  
CHANNEL = Number for the channel in use

FIND WIFI NETWORKS = The terminal seeks all available networks from the area and lists them on the display. After choosing a network the terminal asks for the WEP KEY. Input the correct wep key and press enter. The terminal connects to the chosen network.

PRINT PARAMS = The terminal prints out the configured WIFI settings.

## 2.12 Audit log IP

With the audit log IP-function, your payment terminal sends log information to a desired IP-address. The terminal logs include error and update information etc. from the payment terminal.

To input your desired IP-address, select the Settings icon from the screen and press enter. Choose Edit, and navigate down with the arrow icon and select Audit log IP. Input the IP-address; to get a dot, press 1 repeatedly until the correct character is on the display.



### 3. DOWNLOADS

#### 3.1 Downloading applications

**NOTE! The terminal should be kept still and connected to the power cord during the entire download. It is not advised to download the terminal e.g. in a moving vehicle. This might disrupt the download.**

**Send the batch from the terminal before downloading.**

**To send the batch, select the Reports icon from the screen, press Enter and choose SEND BATCH.**

Select the Settings icon from the screen and press Enter.

Choose APP. DOWNLOAD

Select APP + PARAMS or ONLY APPLICATION

The terminal downloads the application. A white bar appears on the screen, which gradually turns black as the download progresses.

**NOTE! Parameters must be downloaded to the terminal after the application download has ended. Guides for parameter downloading are listed below.**

#### 3.2 Parameter downloading

Select the Settings icon from the screen and press Enter.

Choose DOWNLOAD

Choose FROM LOADPOINT

Choose PHONE

The terminal downloads the parameters. A white bar appears on the screen, which gradually turns black as the download progresses. The terminal prints on the paper "SUCCESSFUL PARAMETERS DOWNLOAD".

**NOTE! After downloading the parameters, the terminal must connect to the bank. Select Reports from the screen, press Enter and choose SEND BATCH.**

#### 3.3 Certificate downloading

The certificate is always already loaded to the terminal by Point.

Select the Settings icon from the screen and press Enter.

Choose DOWNLOAD

Choose DOWNLOAD CERTIFICATE


The terminal downloads the certificate and prints on the paper "SUCCESSFUL CERTIFICATE DOWNLOAD".



## 4. DAILY USE

### 4.1 Transactions

#### 4.1.1 Chip card transactions

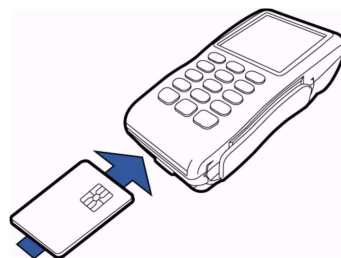

ENTER AMOUNT: Type the precise amount, including the cents, and press Enter.

PLEASE INSERT OR SWIPE CARD: Insert the card into the chip reader, located at the front of the terminal, with the chip side facing up.

CREDIT / DEBIT: Customer selects the payment method.

ENTER PIN: Customer types the PIN-code and presses Enter.

**NOTE! You can pass the PIN-code by pressing Enter. In this case the responsibility of the transaction is yours.**


The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

If the PIN-code was entered, the customer does not need to sign the receipt. The terminal will remind you to check the customer's ID, if the transaction exceeds 50,00€ (depending on the card used). Press Enter, check the ID and write the last 4 digits of the social security number and which ID was checked to the receipt.

REMOVE CARD: Take the card from the chip card reader.

**NOTE! The card must be in the reader during the entire transaction. Otherwise the transaction is cancelled.**

#### 4.1.2 Swipe card transactions

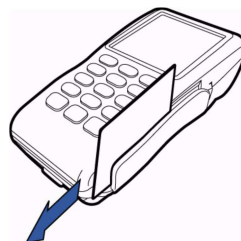

ENTER AMOUNT: Type the precise amount, including the cents, and press Enter.

PLEASE INSERT OR SWIPE CARD: Swipe the card from the magnetic reader.

CREDIT / DEBIT: Choose the payment method

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

The terminal will remind you to check the customer's ID, if the transaction exceeds 50,00€ (depending on the card used). Press Enter, check the ID and write the last 4 digits of the social security number and which ID was checked to the receipt.



#### 4.1.3 Contactless card transactions

ENTER AMOUNT: Type the precise amount, and press Enter.

INSERT/SWIPE OR PRESENT CARD: Place the card on top of the display.

CREDIT / DEBIT: Choose the payment method

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

Contactless cards have a floor limit for contactless transactions that is defined by the card company. When the limit is exceeded the terminal asks to insert the card into the chip reader. In these cases the transaction is done with the chip reader.

**NOTE! The reversal of a contactless card transaction is not possible, if it has not been authorized. In these cases the terminal will inform NOT ALLOWED. If you wish to void an unauthorized transaction you should use the refund function for the transaction (4.1.8).**

#### 4.1.4 Reversal

**NOTE! A reversal can only be done to a transaction that is still in the terminals memory.**

Press the Menu icon from the screen and choose REVERSAL.

ENTER RECEIPT NUMBER: The terminal suggests the number of the last transaction. Accept by pressing Enter. Otherwise, type the wanted receipt number and press Enter.

The terminal informs CANCELLATION APPROVED, prints out the merchant's receipt and asks to print out the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

TRANSACTION DOESN'T EXIST: The receipt number is incorrectly typed or the transaction has been sent forward from the terminal.

#### 4.1.5 External void

**NOTE! External voids cannot be performed without the card that the transaction has been made with.**

With the external void you can void a transaction that has been made with another terminal. This requires that the terminals are linked to the Point reporting.

Select the Menu icon from the screen and choose EXTERNAL VOID

ENTER RECEIPT NUMBER: Type the transaction's receipt number. This is found on the receipt.

INPUT SN: Enter the serial number of the terminal, in which the transaction has been made. The serial number is located at the back side of the terminal, next to the bar code after initials S/N.

TRANSACTION TIME HHMM?: Type the time of the transaction (hours:minutes). This is found on the receipt.

PLEASE INSERT CARD: Insert the card that the transaction has been made with into the chip reader. The terminal connects and voids the transaction. The terminal informs CANCELLATION APPROVED.



The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

#### 4.1.6 Manual entry

Select the Menu icon from the screen and choose MANUAL ENTRY

CARD NUMBER: Type the card number and press Enter

EXPIRY DATE: Type the card's expiry date and press Enter

CREDIT / DEBIT: Choose the payment method.

ENTER AMOUNT: Type the complete amount and press Enter .

DIAL YES / NO: If you want the terminal to make an automatic authentication for the transaction choose YES

#### **NOTE! Manually entered transactions must be authenticated**

If you pass the authentication by choosing NO the terminal will ask for authentication code. Call to the authorization centre and ask for an authentication code. Type in the code given to you and press Enter. You can pass this by typing 9999. In this case the responsibility of the transaction is on the company.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

The terminal will remind you to check the customer's ID, if the transaction exceeds 50,00€ (depending on the card used). Press Enter, check the ID and write the last 4 digits of the social security number and which ID was checked to the receipt.

NOT ALLOWED: The transaction is not allowed with the card type

#### 4.1.7 Receipt copy

Select the Menu icon and choose PRINT COPY.

RECEIPT NUMBER: The terminal suggests the number of the last transaction. Accept by pressing Enter. Otherwise, type the wanted receipt number and press Enter.

The terminal prints out a copy.

#### 4.1.8 Refund

You can make a refund at any time. If you need to undo a transaction at the same day use the REVERSAL instead

#### **NOTE! It is not allowed to make a return for a bank card.**

Select the Menu icon and choose REFUND

ENTER AMOUNT: Type the complete amount and press Enter

INSERT/SWIPE OR TAP CARD: Insert the card into the chip reader, swipe the card or place the card on top of the display



CREDIT / DEBIT: Choose the payment method.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

If the PIN-code was entered, the customer does not need to sign the receipt. The terminal will remind you to check the customer's ID, if the transaction exceeds 50,00€ (depending on the card used). Press Enter, check the ID and write the last 4 digits of the social security number and which ID was checked to the receipt.

Refund without the card: Press the \* key when the terminal asks to insert the card. The terminal asks for the card number and expiry date. The terminal will inform NOT ALLOWED if the card does not allow manual entry.

## 4.2 ONLINE TRANSACTIONS

### 4.2.1 General information on online transactions

Online batch is a function which sends information on each payment transaction to the real-time database of the Point reporting service. This is to prevent the loss of information from the payment terminal. In connection with the next manual or automatic transaction transmission the transactions stored in the database change status in the Point reporting service and will be automatically sent to the recipient.

The option CONDITIONAL for online batches is available for terminal devices using GPRS. If an offline transaction is made (the card is not verified), the terminal will not make an online transmission of the transaction. When a verified transaction is carried out, the terminal makes an online transmission of the transaction and also sends any transactions that have been queued.

**NOTE! If the online batch is not activated, the transactions will be stored in the terminal's memory until the next batch sending. In these cases the responsibility is always the merchant's! It is recommended to use the online batch-function. If you wish to deactivate this setting, please contact Point's customer service.**

### 4.2.2 Online batch

Online batch settings enable you to choose the maximum sum and number of transactions in the terminal memory. After the maximum is reached, the terminal transmits the transactions forward.

- ONLINE QUEUE AMOUNT = The maximum sum of the transactions in queue. After this amount is reached, the terminal will send all of the transactions in queue (e.g. 2,000 euros).
- ONLINE QUEUE COUNT = The maximum number of the transactions in queue. After this number is reached, the terminal will send all of the transactions in queue (e.g. 20).

The largest possible sum is 999999,99 €. The largest possible number is 40.

**NOTE! If you wish to edit these settings, please contact Point's customer service**

### 4.2.3 Point reporting

Point reporting is a transaction collecting system by Point, which enables companies to monitor their centralized money flow. The service offers a customer-specific website that makes the



centralized management possible for companies. Point reporting gathers transactions from terminals into different groups determined by the customer. The transactions are sent from the service to the customer's bank every day. The banks payments appear in the company's account with the Point reporting group names. A group-specific reference can be determined for the bank payments. This makes it easier for financial management programs to target specific payments.

A customer needs only one contract to enable all their terminals to be linked to Point reporting. Terminals linked to the service do not require installment of PATU-keys from the bank. The customer-specific websites for the system are encrypted with the same method as online bank services. The connection between a client's web browser and Point reporting is encrypted (https). Users log in to the service with three different identification information's: username, fixed password and a variable password from a password list.

For further information about Point reporting, contact Point's sales department:

Tel: **+358 (0)9 477 43340**

E-mail: **myynti@point.fi**

## 4.3 Reports and bank connection

### 4.3.1 Print batch

Select the Reports icon from the screen and press Enter.

Choose PRINT BATCH.

The terminal prints out a report of the current days transactions. Different card types are grouped separately on the receipt. The terminal resets the report after sending the batch from the terminal.

### 4.3.2 Monthly report

The monthly report can also be used as a shift report. The report gathers information of the transactions until the monthly report is reset.

**NOTE! The report must always be printed before being reset.**

Printing the monthly report:

Select the Reports icon and press Enter.

Select MONTHLY REPORT.

Select again MONTHLY REPORT.

The terminal prints out the report.

Resetting the monthly report:

Select the Reports icon and press Enter.

Select MONTHLY REPORT.

Select RESET REPORT

The terminal resets the report.



#### 4.3.3 Send Batch

The terminal automatically sends the batch, if you have installed a sending time to the settings. You can also send the batch manually, for example if the automatic batch sending has not succeeded.

**NOTE! The automatic batch sending does not work, if the terminal is turned off.**

Select the Reports menu from the screen and press Enter.  
Choose SEND BATCH.

The terminal prints out the report and connects to Point reporting. The terminal sends the transactions, retrieves the necessary files: return report, EMV keys, AID and BIN tables, and the blacklist.

If the batch sending is ok, the terminal prints out "BATCH SENDING OK". This text does not appear if there are no transactions on the report.

**NOTE! The merchant has the duty to check that the accounting is correct with the report "LÄHETYSERÄRAPORTTI" and the return report "MAKSUPÄÄTEPALAUTE".**

#### 4.3.4 Blacklist

The terminal updates the blacklist automatically during the batch sending. You can also download the blacklist manually if it is missing from the terminal.

Select the Settings menu from the screen and press Enter.  
Choose DOWNLOAD.  
Choose BLACKLIST and select FULL or UPDATE.

FULL = Terminal downloads the full blacklist

UPDATE = Terminal updates the blacklist

The terminal connects to Point reporting and downloads the blacklist from the bank. The terminal prints out to the receipt the amount of cards on the blacklist.



#### 4.3.5 Report explanations

This is an example of the report and the information in it.

```

TCS TEST
VERSION 42
PVM: 07/05/09      AIKA: 11:35:00
KASSANRO: 001
ERA: 001 40006-01398-01404
      LAHETYSRAPORTTI
      EUR  KPL
-----
PANKKIKORTTI      5.00  1
-0111009
VISA-PC            1.00  1
-0111010
DEBIT              2.00  1
-0111011
AMEX               2.50  1
-1111012
DINERS             1.50  1
-0111013
ELECTRON           1.20  1
-0111014

VHTEENSA          13.20  6

*****
KASSA          0.00  0

*****
LASKU VHTEENSA    0.00  0

*****
KATEISENNOSTO    0.00  0

*****
PALAUTUS          0.00  0
*****

EMVPP  EUR 000000000
00000000001220-00000000000000000000 050
507114705000000

LÄHETYS OK TAPAHTUMAT
HYVÄKSYTTY NOLLATTU
MAKSUPÄÄTEPALAUTE
*****

```

```

MAKSUPÄÄTEPALAUTE

LAHETYSERA: 000078 04/01/08 13:26
TOLITYSERA: 000078 03/01/08 17:13
TILI: 00001200060062
JASENLIITENUMERO 0266199
MYYNIT            7.56  4
OIK               3.30  2
YHT               4.26
KAIKKI YHTEENSA
MYYNIT            7.56  4
OIK               3.30  2
YHT               4.26

- - - - -

***** AID TULUN LATAUS *****
ATTENDEDPOS      010500
***** AID TULU LADATTU *****
***** BIN TULUN LATAUS *****
090300
BIN TULU LADATTU
***** EMV AVAINTEN LATAUS *****
Tuotantoavain    010700
***** EMV AVAIMET LADATTU *****

BL 11:42:12 07/05/2009
KIELTOLUETTELO: 9191 KPL
//VA=K,
P .L .DC.

- - - - -

```

SENT TO TCS: The total sum and amount of transactions that are sent to Point reporting as online transactions

NOT SENT TO TCS: The total sum and amount of transactions that have not been sent to Point reporting as online transactions.

YHTEENSA: The total sum and amount of all the transactions in the terminal's memory.

BATCH SENDING OK: the batch sending is ok.

MAKSUPÄÄTEPALAUTE: information of the previous batch sending. This only comes if it has been formed at the bank. It never comes on weekends and bank holidays or if the terminal has not been in use.

AID TABLE, BIN TABLE and KEYS: These are updated if the bank has updated them.

KIELTOLUETTELO: this shows the amount of cards on the blacklist.

#### 4.4 Authorization notifications

When a transaction is declined at the authorization centre a declining code is printed on the receipt. This code tells you the reason why it has been declined. The transaction is declined by a notification given by the bank or the credit card company.

| <b>000-099</b> | <b>Accepted</b>                                                            |
|----------------|----------------------------------------------------------------------------|
| 000            | Accepted                                                                   |
| 001            | Check ID                                                                   |
| 002            | Accepted for partial amount                                                |
| 003            | Accepted (VIP)                                                             |
| 005            | Accepted, account type defined by the card donor                           |
| 006            | Accepted for partial amount, account type defined by the card donor        |
| 007            | Accepted, chip update                                                      |
| <b>100-199</b> | <b>Declined, card removal not needed</b>                                   |
| 100            | Declined                                                                   |
| 101            | Card is no longer valid                                                    |
| 102            | Suspected card counterfeit                                                 |
| 103            | Cashier, call recipient                                                    |
| 104            | Limited card                                                               |
| 105            | Cashier, call recipients' security department                              |
| 106            | Exceeds PIN-code attempts                                                  |
| 107            | Cashier, call the card donor                                               |
| 108            | Cashier, check the card donors' special terms, make a manual authorization |
| 109            | False payment recipients' identifier                                       |
| 110            | False amount                                                               |
| 111            | False card number                                                          |
| 112            | PIN-code required                                                          |
| 113            | Commission not accepted                                                    |
| 114            | False account type                                                         |
| 115            | Required action not supported                                              |
| 116            | Not enough allowance                                                       |
| 117            | False PIN                                                                  |
| 118            | Unknown card                                                               |
| 119            | Transaction is not allowed for card holder                                 |
| 120            | Transaction is not allowed for payment terminal                            |
| 121            | Exceeds withdrawals floor limit                                            |
| 122            | Security violation                                                         |
| 123            | Exceeds withdrawals time limit (too often)                                 |
| 124            | Crown violation                                                            |
| 125            | Card is not valid yet                                                      |
| 126            | False PIN block                                                            |
| 127            | False PIN length                                                           |
| 128            | False PIN key synchronization                                              |
| 129            | Suspected abuse                                                            |
| <b>200-299</b> | <b>Declined, card removal needed</b>                                       |
| 200            | Declined                                                                   |
| 201            | Card expired                                                               |



|                |                                                             |
|----------------|-------------------------------------------------------------|
| 202            | Suspected card counterfeit                                  |
| 203            | Cashier, contact the recipient                              |
| 204            | Limited card                                                |
| 205            | Cashier, contact recipients' security department            |
| 206            | Exceeds PIN-code attempts                                   |
| 207            | Special situation                                           |
| 208            | Extinct card                                                |
| 209            | Stolen card                                                 |
| 210            | Suspected abuse                                             |
| 300            | Successful                                                  |
| 306            | Unsuccessful                                                |
| 307            | unsuccessful, form fault                                    |
| 400            | Declined. Accepted revocation of authorization, try again   |
| <b>900-999</b> | <b><u>System error, authorization not successful</u></b>    |
| 902            | False transaction                                           |
| 903            | Do the transaction again                                    |
| 904            | Form fault, try again                                       |
| 905            | Unable to route the transaction to recipient                |
| 906            | Temporary usage brake in the card donors system             |
| 907            | No connection to the card donor                             |
| 908            | Unable to route the message                                 |
| 909            | System error                                                |
| 910            | Unable to connect to the card donor                         |
| 911            | Unable to connect to the card donor                         |
| 912            | Card donor not available                                    |
| 913            | Dual transaction sending                                    |
| 914            | The original transaction cannot be traced                   |
| 915            | Control error, card donors' system temporarily unavailable  |
| 916            | MAC-error                                                   |
| 917            | MAC-synchronization error                                   |
| 918            | Data transfer keys not available                            |
| 919            | Encryption keys' synchronization error                      |
| 920            | Security program error, try again                           |
| 921            | Security program error, no transaction                      |
| 922            | Unknown message number                                      |
| 923            | Transaction is being processed                              |
| 930            | Payment terminal error, date error                          |
| <b>1Z3</b>     | <b>Unable to connect to authorization centre, try again</b> |
| <b>0Y1</b>     | <b>Offline accepted, no authorization</b>                   |
| <b>0Y3</b>     | <b>Offline accepted, unsuccessful authorization</b>         |
| <b>1Z1</b>     | <b>Offline declined</b>                                     |



## 5. SPECIAL FUNCTIONS

### 5.1 Cash receipt

Cash receipt is used when a customer pays with cash and a receipt is wanted from the terminal. Cash receipts are also seen on batch reports.

Cash receipt is activated from the Settings menu (2.1).

#### **Making a cash receipt sale:**

Select the Menu icon from the screen

Choose CASH RECEIPT

Select CASH RECEIPT SALE

ENTER AMOUNT: Enter the complete amount and press Enter.

VAT RATE %: Select the VAT percent.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

#### **Voiding a cash receipt sale:**

Select the Menu icon from the screen

Choose CASH RECEIPT

Choose CASH RECEIPT VOID

ENTER AMOUNT: Enter the complete amount and press Enter.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

### 5.2 Cash back

Cash back is a function that allows customers to withdraw cash from the cash register during a transaction. This action is possible with a credit- or debit card and always requires a transaction. Only withdrawing cash is not possible with the cash back-function.

Press the MENU icon and select CASH BACK

PAYMENT AMOUNT: Type the sum of the transaction and press Enter.

CASH BACK AMOUNT: Type the sum of the cash withdraw and press Enter.

The terminal prints out receipts, which display separately the payment and cash back amounts. Always check the customer's ID during a cash back transaction

### 5.3 Cash withdraw

Cash withdraw is used when a customer wants to withdraw cash from the cash register. A transaction is made, and the customer receives cash from the register. The merchant receives 0,50 € from every cash withdraw transaction. For example, if a customer wants to withdraw 10,00€ the merchant makes a transaction of 10,50€. The customer receives 10,00€ from the cash register.

**NOTE! It is only permitted to make a cash withdraw with a bank card. You must make a contract with your bank in order to make cash withdraws.**



Press the Menu icon from the screen  
Choose CASH WITHDRAW  
ENTER AMOUNT: Enter the complete number and press Enter.  
PLEASE INSERT OR SWIPE CARD: Insert the chip card to the reader or swipe the card  
CREDIT / DEBIT: Choose the payment method  
ENTER PIN: Customer types the PIN-code and presses Enter, if the card is a chip card.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

The terminal will remind you to check the customer's ID, if the transaction exceeds 50,00€ (depending on the card used). Press Enter, check the ID and write the last 4 digits of the social security number and which ID was checked to the receipt.

## 5.4 Extra amount

Extra amount is used for example in restaurants when a customer wishes to leave tip for the waiter.

The Extra amount-function is activated from the Settings menu (2.1).

Extra amount options:

No = Extra is not in use

Only before = Extra amount is given during the transaction

Only after = Extra amount is printed on the receipt and it is entered afterwards to the terminal

Unrestricted = The terminal asks for extra during the transaction and also prints an extra line to the receipt

**NOTE! If the card in use is a chip card you can only give the extra amount during the transaction.**

Entering the extra amount afterwards:

The receipt has an amount marked on the EXTRA part. This amount should be typed manually to the terminal during the same day of the transaction.

Press the Menu icon from the screen

Select EXTRA AMOUNT

RECEIPT NUMBER: The terminal suggests the number of the last transaction. Accept by pressing Enter. Otherwise, type the wanted receipt number and press Enter.

EXTRA: Enter the amount and press Enter.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

## 5.5 VAT

VAT is activated from the Settings menu (2.1).

When making a transaction, the terminal asks to choose a VAT-rate for the transaction. Select the rate from the icons on the screen. The terminal prints out the VAT rate on the receipt.



## 5.6 Mandatory authorization

Mandatory authorization is activated from the Settings menu (2.1). When the mandatory authorization is activated, the terminal automatically authenticates all transactions regardless of the amount or the card type.

## 5.7 Preauthorization

Preauthorization is activated from the Settings menu (2.1).

With the preauthorization function, the merchant can check the card's functionality. This is useful for example in car rentals or hotels.

Press the Menu button from the screen.

Choose PREAUTHORIZATION.

PLEASE INSERT OR SWIPE CARD: Insert the card into the chip reader or swipe the card.

CREDIT / DEBIT: Choose the payment method.

ENTER AMOUNT: The terminal suggests 1 EUR. Press Enter.

ENTER PIN: If the card is a chip card, customer enters the PIN-code and presses Enter

The terminal connects to the authorization center, makes a provision and revokes it.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

## 5.8 Invoice

The invoice works in the same way as a cash receipt, except that the text INVOICE is printed on the receipt instead of CASH RECEIPT.

### **Making an invoice:**

Press the Menu button from the screen.

Choose INVOICE.

Choose INVOICE again.

ENTER AMOUNT: Enter the complete amount and press Enter.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

### **Voiding an invoice:**

Press the Menu button from the screen.

Choose INVOICE.

Choose VOID INVOICE

ENTER AMOUNT: Enter the complete amount and press Enter.



The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.

## 5.9 Multiuser version

The multiuser version allows several users to take transactions with one terminal so that the batches can be sent to various bank accounts. In order to update your terminal to this version, please contact Point.

### Printing the user list

Press Settings, enter and choose Print.  
Select Users.

The terminal prints a list of the terminal users. This list shows the user numbers, receipt texts and merchant numbers.

### Multiuser transactions

Enter amount: Type the transaction price and press enter.  
User number: Type your user number and press enter.  
Please insert or swipe card: Insert the chip card to the reader or swipe the card.  
CREDIT / DEBIT: Choose the payment method.  
ENTER PIN: Customer types the PIN-code and presses Enter.

The terminal prints out the merchant's receipt and asks to print the customer's receipt. Press Enter if you wish to print out the customer's receipt. Otherwise, press Cancel.  
The terminal will remind you to check the customer's ID, if the transaction exceeds 50,00€ (depending on the card used). Press Enter, check the ID and write the last 4 digits of the social security number and which ID was checked to the receipt.

### Multiuser reports

Daily and monthly multiuser reports are similar to normal reports, except that multiuser reports specify every user's transactions separately.

## 5.10 Product version

Product version allows you to define products for your terminal. In this version receipts print out details of the sold products. This version can replace receipts from cash registers. In order to update your terminal to this version, please contact Point.

### Forming VAT-groups

Select Settings, press enter and choose Edit.  
Navigate down with the arrow key and select Edit VAT group  
The display shows the following:  
a) Add VAT group  
b) Edit VAT group



## c) Remove VAT group

## a) Add VAT group

VAT group: Type the groups number (0-99) and press Enter.

VAT%: Type the VAT percent and press Enter.

The display shows the group number and VAT percent. Accept this group by pressing enter; cancel by the cancel-key.

Add next VAT: If you wish to add a new group, press enter. Otherwise press cancel.

## b) Edit VAT group

VAT group: Type the group number and press Enter.

VAT: Type a new VAT percent and press Enter.

The display shows the group number and VAT percent. Accept this group by pressing enter; cancel by the cancel-key.

Edit next VAT: If you wish to edit another group, press enter. Otherwise press cancel.

## c) Remove VAT group

**NOTE! You cannot remove a VAT-group if products are defined to the group. The products must be removed first in these cases.**

VAT Group: Type the group number and press enter.

The terminal asks to confirm of the removal of the VAT group. To accept, press enter. Otherwise press cancel.

Delete next VAT: If you wish to remove another group, press enter. Otherwise, press cancel.

## Forming product groups

Select Settings, press enter and choose Edit.

Navigate down with the arrow key and select Edit products

The display shows the following:

## a) Add product

## b) Edit product

## c) Remove product

## a) Add product

Product id: type the products number (0-99) and press Enter.

Product name: Type the product name and press enter. To get letters, press repeatedly a number key until the correct character is on the screen. To get a lowercase letter, press the icon on the screen.

VAT group: Type the VAT group number and press enter.

Price: Type the price for the product, and enter. If the product does not have a fixed price, type 0.

The display shows the product name, VAT group and the price. Accept this by pressing enter; cancel by the cancel-key.

Add next product: If you wish to add another product, press enter. Otherwise, press cancel.

## b) Edit product

Product id: type the products number and press Enter.

Product name: Change the name of the product if needed and press enter.



VAT group: Change the VAT group if needed and press enter.

Price: Change the price if needed and press enter.

The display shows the product name, VAT group and the price. Accept this by pressing enter; cancel by the cancel-key.

Edit next product: If you wish to edit another product, press enter. Otherwise, press cancel.

c) Remove product

**NOTE! You cannot remove a product that is included in unsent transactions, or if you have not sent the batch.**

Product id: Type the products number and press enter.

The display shows the product name, VAT group and the price. Accept the removal by pressing enter; cancel by the cancel-key.

Delete next product: If you wish to remove another product, press enter. Otherwise, press cancel.

### Product and VAT group lists

To print product or VAT group lists, press Settings, enter and choose Print.

VAT groups: select Print VAT groups

Product groups: select Print products

### Product transaction

Press the \*-key (below 7)

Product id: Type the products number and press enter.

Units: Type the unit amount for this product and press enter.

Price per unit: Type the price for the product and press enter. If the product has a fixed price, this will show on the screen. This can be changed if needed.

The terminal shows the total unit amount and total price for the transaction. Press enter.

The following options are shown:

- a) Cash receipt – choose this, if the customer pays in cash.
- b) Make a payment? – Choose this, if the customer uses a payment card.
- c) Add next product? – Choose this, if you wish to sell multiple products.

The terminal prints out the receipts.

### Reversal of a product transaction

Press Menu and select cash receipt.

Choose Cash receipt void

Add products: press enter and type the product number.

Units: Type the unit amount for this product and press enter.

Price per unit: Type the price for the product and press enter. If the product has a fixed price, this will show on the screen. This can be changed if needed.

The terminal shows the total unit amount and total price for the transaction. Press enter.

The following options are shown:

- a) Make a payment? – The terminal prints out the receipt.
- b) Add next product? – Choose this, if you wish to reverse multiple products.



The terminal prints out the receipts.

**NOTE! If the transaction has been made with a payment card, the reversal must also be done to the card transaction.**

## Product reports

Report printing:

Press Reports, enter and choose product report.  
Choose daily report.

The terminal prints out a report that lists the sold products, the amount of products, the total amount of sold products and the different VAT groups of the sales.

Resetting the report:

The terminal gathers transactions to the report until it is been reset. The report can be reset at any time.

Press Reports, enter and choose Product report.  
Choose daily report and select reset report.  
Choose yes.

The terminal prints out the product report and resets it.

## 6. TROUBLE SHOOTING

### 6.1 Notifications on the screen

NO SIM CARD = The terminal does not have a SIM-card inside, or the SIM-card is not properly placed. See instructions (1.6)

NO BATTERY = Check that the battery is firmly locked at its place. The terminal cannot connect or print receipts without the battery.

BLACKLIST MISSING = The blacklist is missing from the terminal. See instructions for downloading the blacklist (4.4.4).

USE MAG CARD = The terminal cannot read the card's chip. Use the magnetic strip reader.

USE CHIP = The card has an EMV-chip. Use the chip reader.

PIN LOCKED = The pin code of the card in use has been locked. It can be unlocked by contacting the card donor or by using the card on an atm.

APPLICATION LOCKED = The application on the card is locked. The card holder has to contact the card donor.

JÄSENLIKENUMERO PUUTTUU = The card is not included in the terminals card



selection. It cannot be used. The terminal also might not have the AID and BIN-tables. Send the batch from the terminal (instructions 4.4.3).

SERVICE NOT ALLOWED FOR THIS CARD PRODUCT = The card in use is not included in the terminals card selection. It cannot be used.

NOT ALLOWED = The card in use does not permit to make the wanted transaction. For example manual entry with a Visa Electron is not allowed.

WRONG CARD = Check that the card in use is the correct card for the required transaction.

TRANS NOT FOUND = The transaction is not in the terminals memory, check the receipt number.

MAX LIMIT EXCEEDED = The amount of the transaction exceeds the maximum limit of the card in use.

WRONG PIN = Customer has typed the wrong PIN-code for the card.

DOWNLOAD NEEDED = The program needs to be downloaded to the terminal. Contact Point's customer service.

TAMPERING DETECTED = The terminal has suffered a knock or a power surge, which has caused it to go into a security lock mode. The terminal must be delivered to Point's maintenance service, where the security lock can be opened. See instructions, part 6.4.

## 6.2 Notifications on the receipt

CONNECTION ERROR = There is a problem with the connection. See part 6.3.

BATCH SENDING ERROR = There is a problem with the connection. See part 6.3.

"PYYTÄMÄÄNNE AINEISTOA EI OLE" = The bank does not have information of the previous batch sending ready.

"TAPAHTUMATIEDOSTO PUUTTUU" = The bank does not have information ready of the previous batch sending.

ERROR FILE NOT EXISTENT = The bank does not have information ready of the previous batch sending.

OTA YHTEYS NEUVONTAAN = Contact the bank.

## 6.3 Other exceptions

CONNECTION PROBLEM = Switch the terminal off and on and try to connect again. Check that the SIM-card is properly placed in its slot.

TERMINAL DOES NOT READ CARDS = Switch the terminal off and on and try again. The chip card reader might also be unclean. Clean the reader with a cleaning card and try again.



POWER IS OFF = Switch on the terminal by pressing the Enter-button for a while. The battery might also be empty and require charging.



## 6.4 Service

**NOTE! Do not, under any circumstances, try to fix the terminal by yourself. The terminal should be always delivered to the maintenance service.**

If you suspect that the terminal is damaged or broken, do the following:

- Pack the terminal firmly, so that it will not be damaged during the delivery.
- Attach a description of the problem and your contact information with the terminal. Attach also a notification if there are transactions in the terminal.
- You do not have to send the cables with the terminal unless you want them tested too.
- Send the terminal by post. The postage is always paid by the sender.
- Service address is:

**Point Transaction Systems Oy/  
Service**

**Vanha Nurmijärventie 62D  
01670 Vantaa**

